



# If You Have a Flat Tyre

## Emergency Wheel Removal/Installation

Refer to *Safety Precautions* on page 89 .

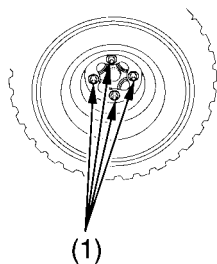

(1) wheel nuts

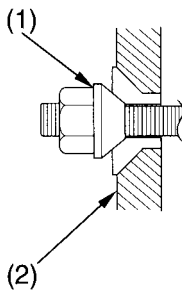

(2) wheel rim

### Removal

1. Park your ATV on a firm, level surface.
2. Raise the front (or rear) wheels off the ground and place a support block under the vehicle.
3. Remove the wheel nuts ( 1 ).
4. Remove the wheel.

### Installation

1. Position the wheel.
2. Position the wheel nuts so that the tapered sides face the wheel rim ( 2 ).
3. Tighten the wheel nuts in a crisscross (rather than a circular) pattern to the specified torque:  
**64 N·m (6.5 kgf·m , 47 lbf·ft)**

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.