

Maintenance Schedule

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			↔	mi	100	600	1200	
				km	150	1000	2000	
			NOTE	HOURS	20	100	200	
NON EMISSION RELATED ITEMS		REAR FINAL GEAR CASE OIL				(R:EVERY 2 YEARS)		110
	*	BRAKE FLUID	NOTE 3					128
	*	BRAKE SHOE WEAR	NOTE 1					139
		BRAKE SYSTEM						128
	*	REVERSE LOCK SYSTEM						121
		SKID PLATES, ENGINE GUARD						148
	*	CLUTCH SYSTEM						120
	*	SUSPENSION						—
	*	SPARK ARRESTER				C	C	127
	*	NUTS, BOLTS, FASTENERS						—
	**	WHEELS/TIRES						—
	**	STEERING SHAFT HOLDER BEARINGS						—
	**	STEERING SYSTEM						—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 202).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.