

T

Throttle	
Cable	86
Lever.....	17, 86
Tires	
Inflation and air pressure	123
Repairing.....	126
Specifications	124
Tread condition	125
Tire pressure gauge	30
Tool kit	81
Transporting procedures.....	132
Turning	
On level ground.....	60
On slopes.....	73

V

Valve clearance	106
-----------------------	-----

W

Warning labels	7
Warranty service	145
Water	
Riding through.....	75
Weight limits	37
Wheel removal.....	122
Wiring diagram	142