


If a Fuse Blows

1. To prevent an accidental short circuit, turn the ignition switch OFF (O) before checking or replacing the fuse.
2. Remove the seat (page 82).
3. Remove the fuse case cover (1).
4. To access the main fuse (2), remove the fuse box cover (1).

Main Fuse Access

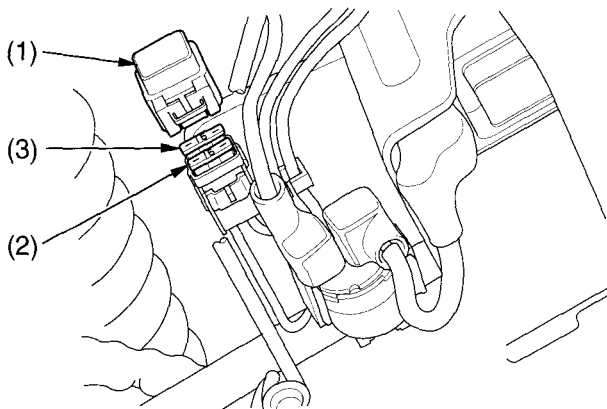

(1) fuse box cover

(3) spare fuse

(2) main fuse

5. Pull the main fuse out.
If it is blown, install the spare main fuse (3).
6. Reinstall the fuse case cover.
7. Install the seat.