

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇨ NOTE	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			HOURS	20	100	200	
* FUEL LINE					I	—	
* THROTTLE OPERATION					I	98	
AIR CLEANER				C	C	95	
AIR CLEANER HOUSING DRAIN TUBE	NOTE 1			I	I	97	
SPARK PLUG	NOTE 2			I	I	105	
* VALVE CLEARANCE			I	I	I	108	
ENGINE OIL			R	R	R	87	
ENGINE OIL FILTER			R	R	R	91	
* ENGINE OIL STRAINER SCREEN IN OIL TANK					C	—	
* ENGINE IDLE SPEED			I	I	I	104	

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 188).