

## Rear Suspension Adjustment


The rear suspension can be adjusted for rider weight and riding conditions by changing the rebound and compression damping.

The rear shock absorber assembly includes a damper unit that contains high pressure nitrogen gas. Do not attempt to disassemble, service, or dispose of the damper; see your Honda dealer. The instructions found in this owner's manual are limited to adjustments of the shock assembly only.

## Rear Suspension Damping

Refer to *Safety Precautions* on page 75 .

### Rebound Damping

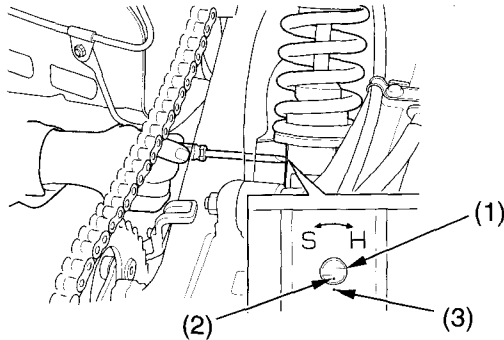

- (1) damping adjuster
- (2) punch mark
- (3) reference punch mark