

Drive Chain

Adjustment


Refer to *Safety Precautions* on page 75 .

1. To adjust slack, use an Allen wrench (1) to loosen the rear axle holder fixing bolts (2) .
2. Turn the adjuster (3) to decrease (A) or increase (B) chain slack.
3. Retighten the rear axle holder fixing bolts.

Rear axle holder fixing bolts torque:
15 lbf·ft (21 N·m , 2.1 kgf·m)

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.

REAR

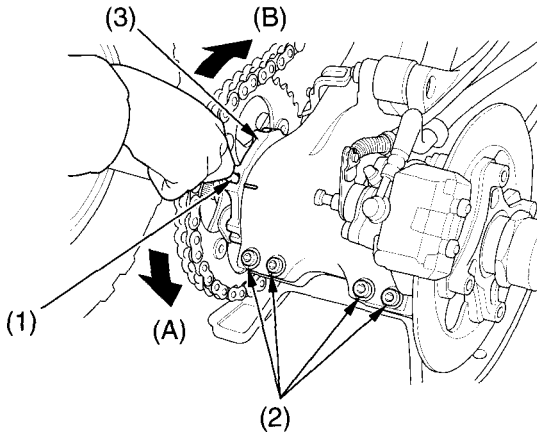

(1) Allen wrench
(2) fixing bolts

(3) adjuster