

MAINTENANCE SCHEDULE

	FREQUENCY	ITEMS	Whichever comes first ⇒	INITIAL	REGULAR		Refer to page	
				MAINTENANCE	MAINTENANCE INTERVAL			
				mi	600	1200		
				km	1000	2000		
		NOTE	HOURS	20	100	200		
EMISSION RELATED ITEMS	*	FUEL LINE				I	—	
	*	THROTTLE OPERATION				I	86	
		AIR CLEANER	(NOTE 1)			C	C	87–89
		AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	90
		SPARK PLUG				I	I	105
	*	VALVE CLEARANCE			I	I	I	106
		ENGINE OIL			R	R	R	24,94–96
		ENGINE OIL FILTER			R	R	R	97–100
	*	ENGINE OIL STRAINER SCREEN IN OIL TANK					C	—
	*	ENGINE IDLE SPEED			I	I	I	91

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate