

FUSE

As illustrated in Fig.4-22 , the fuse (1) is located on left of the battery behind the seat.

To specified fuse is:

15A

If a fuse fails frequently, it usually indicates a short circuit or an over-load in the electrical system. See your authorized Honda dealer for repair.

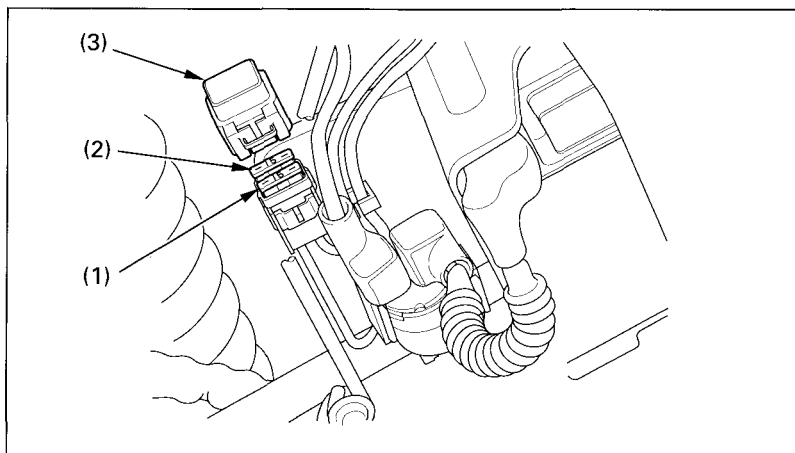


Fig. 4-22

(1) Fuse
(2) Spare fuse

(3) Fuse box cover