

## Recoil Starter

The recoil starter (Fig. 2-10) is on the right side of the FOURTRAX. It is used to start the engine when the battery is low.

To operate the recoil starter:

1. Unsnap and remove the right side cover (2).
2. Grasp the starter grip (1) firmly, then pull it out slowly approximately 4 in (100 mm).
3. Pull the grip up briskly and fully.
4. After the engine starts, allow the starter grip to return slowly.

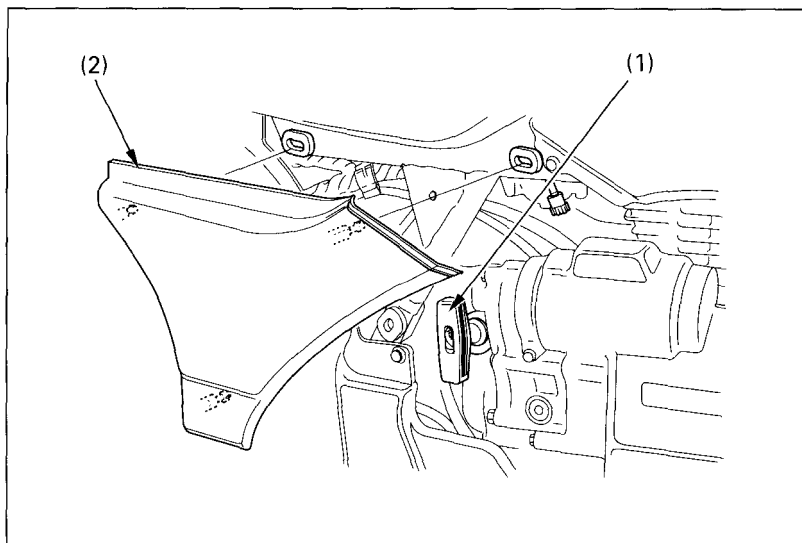


Fig. 2-10 (1) Recoil starter grip

(2) Right side cover