

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			Refer to page	
			REGULAR MAINT. INTERVAL				
			km	150	1000		2000
			mi	100	600		1200
MONTH	1	6	12				
	NOTE	HOURS	20	100	200		
*	FUEL LINE				I	—	
*	THROTTLE OPERATION				I	158	
	AIR CLEANER	NOTE 1		C	C	152	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2		I	I	157	
	SPARK PLUG			I	I	161	
*	VALVE CLEARANCE			I	I	164	
	ENGINE OIL			INITIAL= 150 km (100 mi), 20 operating hours or 1 month: R		132	
	ENGINE OIL FILTER			REGULAR= Every 1,000 km (600 mi), 100 operating hours or 12 months: R		137	
*	ENGINE IDLE SPEED			I	I	—	
	RADIATOR COOLANT	NOTE 3		I	I	145	
*	COOLING SYSTEM	NOTE 2		I	I	—	

* Should be serviced by your dealer, unless you have the proper tools and service data, and is mechanically qualified. Refer to the official Honda Shop Manual.