

Coolant

Radiator Core

Refer to *Safety Precautions* on page 113.

Check the air passages for clogging or damage. Remove insects, mud, or any obstruction with low water pressure. Have the radiator checked by your dealer if the air flow is restricted over more than 20 % of the radiator surface.

Clean the radiator core after riding the ATV in mud.

To clean the radiator core and radiator grill cover:

1. Unhook the reserve tank tube (1).
2. Remove the reserve tank (2) from the left radiator grill cover (3) by removing the bolt (4) and clip (5).
3. Remove the clips (6).
4. Unhook the tab A (7) and tab B (8) on both of the left and right side.
5. Unhook the left side of the centre radiator grill cover hook (9) and slide the left radiator grill cover.
6. Remove the left radiator grill cover.

NOTICE

*Do not apply pressured water directly to the radiator core.
The pressured water can damage the radiator core.*

(cont'd)

Servicing Your Honda 149