

# Emergency Gear Selection & Operation

---

If the shift switches do not operate, use the following procedure to manually select a gear so you may drive the vehicle to a location where it can be loaded and transported to your dealer.

1. Turn the ignition switch to the ON ( I ) position.
2. Remove the seat (page 124), rear fender cover (page 127) and tank cover assembly (page 125).
3. Remove the gear change tool (page 122).
4. Check the neutral indicator.  
If the transmission is in neutral, go to step 5.  
If the transmission is not in neutral, use the gear change tool to shift to neutral so you will be able to start the engine. Refer to *How to Shift Gears Manually*: (page 221).
5. Apply the parking brake.
6. Press the start button to start the engine.
7. Set 2nd gear position. Refer to *How to Shift Gears Manually*: (page 221).
8. Return the gear change tool to the storage location.
9. Install the tank cover assembly, rear fender cover and seat.
10. Get on the ATV. Ride it at a safe speed to a place where it can be repaired or serviced.

## 220 Taking Care of the Unexpected