

Is Your ATV Ready to Ride?

Cable Check the cable housings for wear. Check the

fittings for looseness. Replace or tighten as

needed.

Lights Make sure the headlight, brakelight and

taillight are working properly.

If you are carrying cargo, also check the following:

Loading Limits Make sure you do not exceed the load limits

(page 50).

Cargo Check that all cargo is secure.

Check these items after you get on the ATV:

Throttle Check the freeplay and adjust if needed. Press

the throttle to make sure it moves smoothly without sticking, and snaps shut automatically when it is released, in all steering positions

(page 135).

Brakes Squeeze the front and rear brake levers and

step on the rear brake pedal to check that the controls operate normally. Press down on the rear brake pedal several times, then check for proper brake lever freeplay (page 148). Make

sure there is no brake fluid leakage.

Reverse Assist Lever Check the freeplay and adjust if needed

(page 137). Make sure the lever operates

smoothly without sticking.

Before Riding 47

