



Indicators & Displays

(TRX420FPM only)		
7	Multi-function display	The display includes the following functions. <i>Display Check</i> .
	Gear position indicator	Shows the gear position (page 19).
	Oil change indicator	Lights when specified maintenance interval for engine oil change is reached (page 20).
	Speedometer	Shows riding speed.
	Odometer	Shows accumulated mileage (page 21).
	Tripmeter	Shows mileage per trip (page 21).
	Hourmeter	Shows hours and tenths of hours of engine operation (page 22).
8	Hourmeter/odometer/tripmeter select button	Selects display of the odometer or tripmeter or hourmeter. Resets the tripmeter to zero (0) (page 21). This button also used to reset the oil change indicator (page 20).

