



## Is Your ATV Ready to Ride?

---

- |                                       |  |
|---------------------------------------|--|
| <i>Fuel</i>                           | Check the level and add fuel (page 103) if needed. Also make sure the fuel fill cap is securely fastened.<br>Check for leaks.                  |
| <i>Tires</i>                          | Use a gauge to check the air pressure. Adjust if needed. Also look for signs of damage or excessive wear (page 157 ).                          |
| <i>Drivetrain Boots</i>               | Check for damage (pages 163 , 164 ).   |
| <i>Guards</i>                         | Check for damage or looseness (pages 161 , 162 ).  |
| <i>Nuts &amp; Bolts</i>               | Check the wheels to see that the axle nuts are tightened. Use a wrench to make sure all accessible nuts, bolts, and fasteners are tight.       |
| <i>Underbody &amp; Exhaust System</i> | Check for, and remove, any dirt, vegetation or other debris that could be a fire hazard or interfere with the proper operation of the vehicle. |
| <i>Air Cleaner Housing Drain Tube</i> | Check for deposits in the drain tube. If necessary, clean the tube (page 130 ) and check the air cleaner housing.                              |
| <i>Leaks, Loose Parts</i>             | Walk around your ATV and look for anything that appears unusual, such as a leak or loose cable.  |

