




## Maintenance Component Locations

rear brake lever/parking brake lever

front brake fluid reservoir

front brake lever

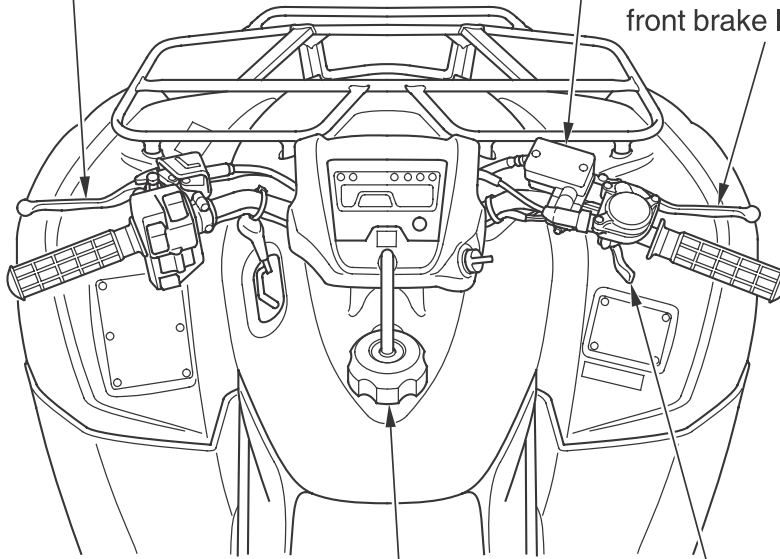

fuel fill cap

throttle lever

