



Engine Oil & Filter

Checking & Adding Oil

Refer to *Safety Precautions* on page 89 .


Check the engine oil level each day before operating your ATV and add if needed.

The oil fill cap/dipstick is located at the front left crankcase.

Before riding your ATV, check the engine oil level.

1. Park your ATV on a firm, level surface.
2. Start the engine in a well-ventilated area and let it idle for 3–5 minutes. If the air temperature is below 10°C (50°F), let the engine idle for an additional 5 minutes (a total of 10 minutes).
3. Stop the engine and wait 2–3 minutes.
4. Remove the seat (page 100).
5. Unsnap and remove the left side cover (1).

LEFT SIDE

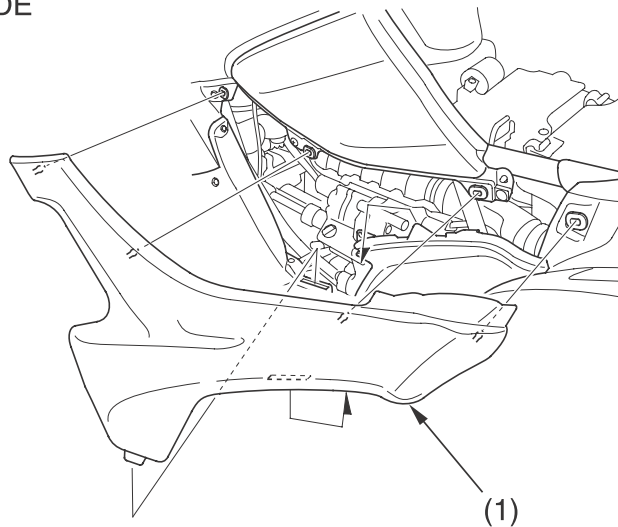

(1) left side cover

