




Battery

The battery is located in a compartment under the rear fender cover.

UNDER REAR FENDER COVER

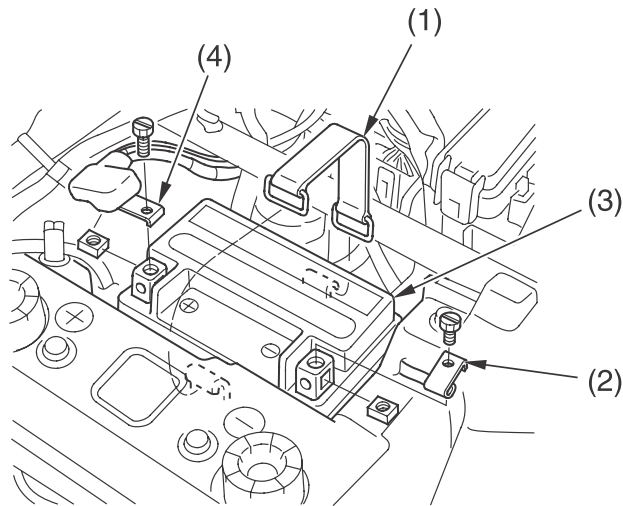

- | | |
|--------------------------------|--------------------------------|
| (1) rubber band | (3) battery |
| (2) negative (−) terminal lead | (4) positive (+) terminal lead |

Removal

1. Make sure the ignition switch is OFF (○).
2. Remove the seat (page 100).
3. Remove the rear fender cover (page 121).
4. Release the rings and remove the rubber band (1).
5. Disconnect the negative (−) terminal lead (2) from the battery (3) first, then disconnect the positive (+) terminal lead (4).

(cont'd)

