

# Storing Your Honda

---

## Removal from Storage

Refer to *Safety Precautions* on page 71 .

1. Uncover and clean your ATV.
2. If your ATV has been stored for more than four months — change the engine oil (page 90 ) and transmission oil (page 96 ).  
Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.
3. If your ATV has been stored for more than two months — ask your Honda dealer to drain and replace the fuel.
4. Lubricate the drive chain (page 150).
5. Perform a pre-ride inspection (page 31 ), then test-ride your ATV at low speeds.