

Engine Oil & Filter

Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 77 .

Your ATV's oil filter has very specific performance requirements. Use a new genuine Honda oil filter specified for your model or a filter of equal quality.

NOTICE


Using the wrong oil filter may result in leaks or premature engine damage.

This procedure requires mechanical skill and professional tools such as a torque wrench, as well as a means for disposing of the drained fluid (page 178). If you do not have the skills or the tools, see your Honda dealer.

Drain the Engine Oil:

1. Start the engine in a well-ventilated area and let it idle for 3–5 minutes. Stop the engine and wait 2–3 minutes.
2. With the ATV on level ground, remove the engine oil filler cap from the left side of the crankcase cover.
3. Place an oil drain pan under the crankcase and remove the engine oil drain plug (1) and sealing washer (2).

UNDER ENGINE

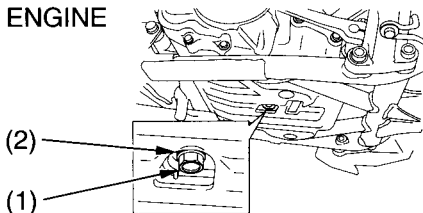

(1) engine oil drain plug

(2) sealing washer