


# Spark Plug

## Spark Plug Inspection & Replacement


Refer to *Safety Precautions* on page 77 .

1. Clean any dirt from around the spark plug base.
2. Disconnect the spark plug cap ( 1 ). Take care to avoid damaging the spark plug wire when disconnecting the cap.
3. Using a spark plug wrench provided in the tool kit, remove the spark plug.
4. Inspect the electrode and centre porcelain for deposits, corrosion, or carbon fouling. If the corrosion or deposits are heavy, replace the plug.
5. Make sure that a 1.2 mm wire-type feeler gauge cannot be inserted between the spark plug gap ( 2 ). If the gauge fits in the gap, replace the plug with a new one.

### RIGHT SIDE

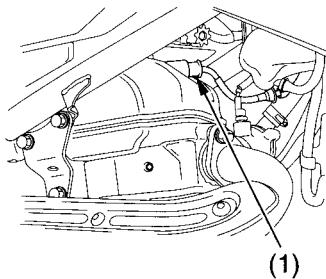

(1) spark plug cap

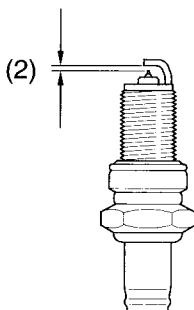

(2) spark plug gap

(cont'd)