

GEARSHIFT CONTROLS

Gearshift Lever

The gearshift lever (1) (Fig. 2-23) is located on the left side of the fuel tank.

The gearshift lever has four positions: Low (L), Drive (D), Neutral (N), and Reverse (R).

The lever must be in Neutral to start the engine (unless you use the special procedure described on page 76).

Before shifting, bring the FOURTRAX to a complete stop.

CAUTION:

Bring the FOURTRAX to a complete stop before moving the shift lever. If the shift lever is moved while the vehicle is moving, the transmission may be damaged.

For most shifts, move the gearshift lever without pushing the release button (2).

You must push the release button before moving the gearshift lever in the following two situations:

- to shift out of Neutral (N)
- to shift down to Low (L) from Drive (D)

After shifting, check that the gear position indicator shows the selected gear position.

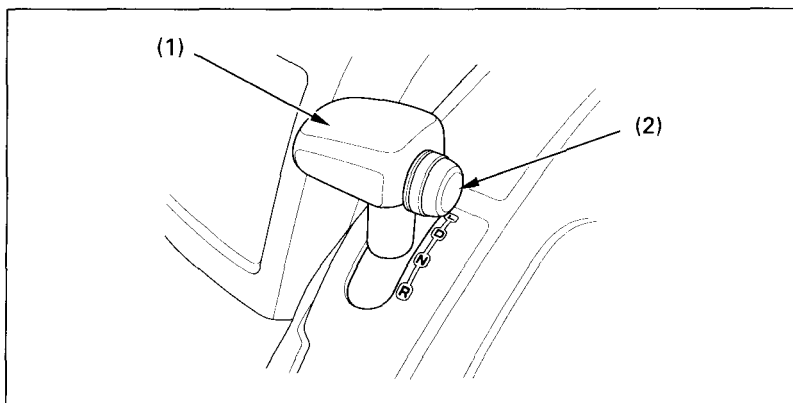


Fig. 2-23 (1) Gearshift lever

(2) Release button