

## Accessory Socket

The accessory socket (1) (Fig. 2-36) is attached to the left side of the assist headlight lower case (2). You can use the accessory socket to power a trouble light, spotlight, CB radio, or cell phone, etc.

Do not plug in any heat-generating accessory such as an automobile cigarette lighter because it can damage the socket.

To use the accessory socket, turn the ignition switch ON ( I ) to start the engine. Then turn the headlights OFF, and open the accessory socket cap (3).

Be sure the engine is on and the headlights are turned off before using the accessory socket, otherwise you may drain the battery.

The accessory socket's rated capacity is DC 12V, 120 Watts (10A) or less.

If you exceed this limit, you may blow a fuse. (For information on fuses, and how to replace a fuse, see pages 136 – 138 .)

When you are done using an accessory, unplug it, and cover the socket with the cap.

Be careful not to flood this accessory socket when washing your FOURTRAX.

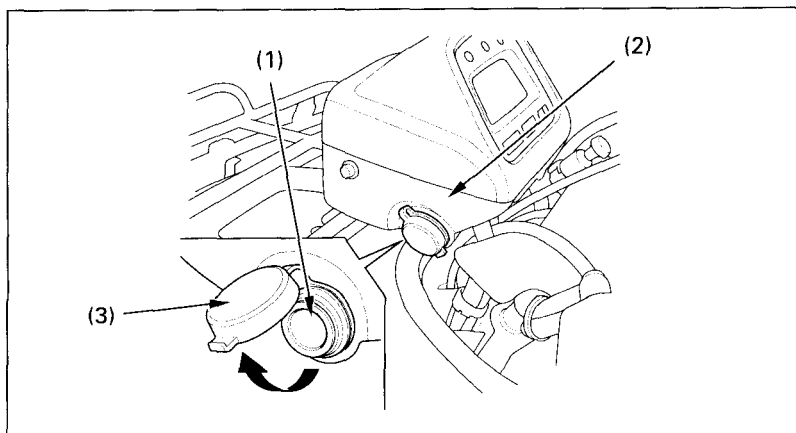


Fig. 2-36      (1) Accessory socket      (3) Cap  
                  (2) Assist head light lower case