

7. Gently wash the air cleaner and sub air clener in clean, non-flammable (high flash point) solvent such as kerosene—not gasoline.
Allow the air clener to dry throughly before applying oil. A wet air cleaner will not fully absorb the oil.

⚠ WARNING

POTENTIAL HAZARD

Using gasoline or low flash point solvents for cleaning ATV parts.

WHAT CAN HAPPEN

A fire or explosion could result.

HOW TO AVOID THE HAZARD

Use only a nonflammable or high flash point solvent to clean ATV parts.

6. Soak the air cleaner in Pro Honda Foam Filter Oil or an equivalent [Canadian Vehicles: gear oil (SAE 80–90)] until saturated, then squeeze out the excess oil.

CAUTION:

Twisting the air cleaner when squeezing out excess oil could damage the air cleaner.

9. Reassemble by reversing the disassembly sequence.
- Install the air cleaner housing cover with the FRONT mark (11) facing forward and fit the cut out of the tab (12) at the end of the air cleaner.