

## LUBRICATION

### ENGINE OIL

#### Checking Engine Oil Level and Adding Oil

Check the engine oil level each day before operating your FOURTRAX and add oil if needed.

Before checking the engine oil level:

1. Make sure the vehicle is on level ground.
2. Remove the dipstick (1) (Fig. 4-11) from the oil tank and wipe it clean.
3. Insert the dipstick without screwing it in, then remove the dipstick and check the oil level.

If the oil level is above the tip mark (2), start the engine and check the oil level.

If the oil does not stick to the dipstick or the oil level is below the tip mark, do not start the engine.

Before starting the engine, remove the oil filler cap (3) and add the specified oil into the filler cap hole, up to the lower level mark (4) on the dipstick. Do not over fill.

Reinstall the oil filler cap and dipstick.

Then start the engine and check the oil level.

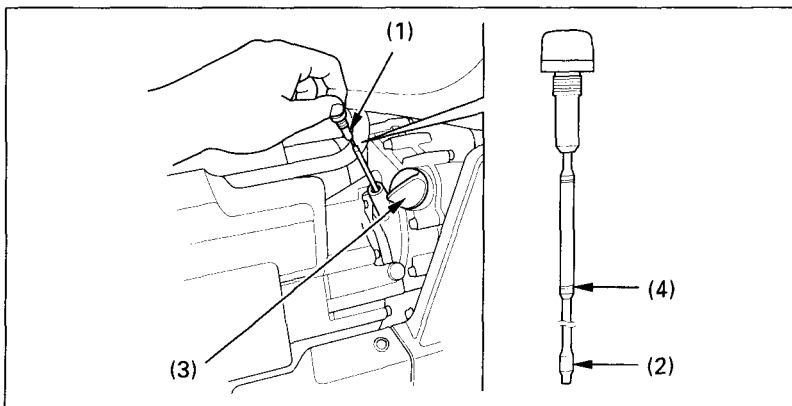


Fig. 4-11

(1) Dipstick  
(2) Tip mark

(3) Oil filler cap  
(4) Lower level mark