

COOLING SYSTEM

COOLANT

Checking Coolant Level and Adding Coolant

Checking the coolant level each day before operating your FOURTRAX and add coolant if needed.

To check the coolant level:

1. Make sure the vehicle is on the level ground.
2. With the engine at normal operating temperature, check the coolant level in the reserve tank (1). It should be between UPPER (2) and LOWER (3) level marks (Fig. 4-19).
If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your Honda dealer for repair.
3. Remove the reserve tank cap (4).
Always add coolant to the reserve tank. Do not attempt to add coolant by removing the radiator cap.
4. Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.

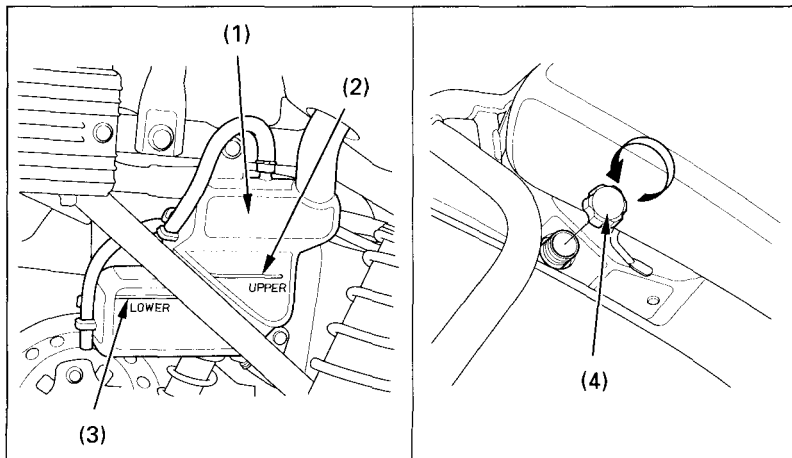


Fig. 4-19 (1) Reserve tank
(2) UPPER level mark
(3) LOWER level mark

(4) Reserve tank cap