

WHEELS AND TIRES

WHEEL REMOVAL

If you need to remove a wheel from your FOURTRAX, follow these procedures:

1. Raise the front (or rear) wheels off the ground and place a support *securely under the vehicle*.
2. Loosen the wheel nuts (Fig. 4-36) with a 17 mm socket wrench.
3. Remove the wheel.

When reinstalling a wheel, tighten the wheel nuts in a crisscross (rather than a circular) pattern.

Wheel nuts torque:

47 lbf-ft (64 N·m , 6.5 kgf·m)

Be sure the tapered side of the wheel nuts face the wheel rim (2).

⚠ WARNING

POTENTIAL HAZARD

Installing wheels improperly.

WHAT CAN HAPPEN

A wheel may come loose, possibly leading to an accident.

HOW TO AVOID THE HAZARD

Carefully follow the instructions in this Owner's Manual when installing wheels.