

## COOLANT

### Coolant Reserve Tank

The coolant reserve tank (1) (Fig. 2-32) is located below the right side of the rear fender. The coolant level should be checked each day before operating the FOURTRAX and maintained between the upper level mark (2) and lower level mark (3).

For coolant recommendations and instructions on checking and adding, see pages 129 – 132.

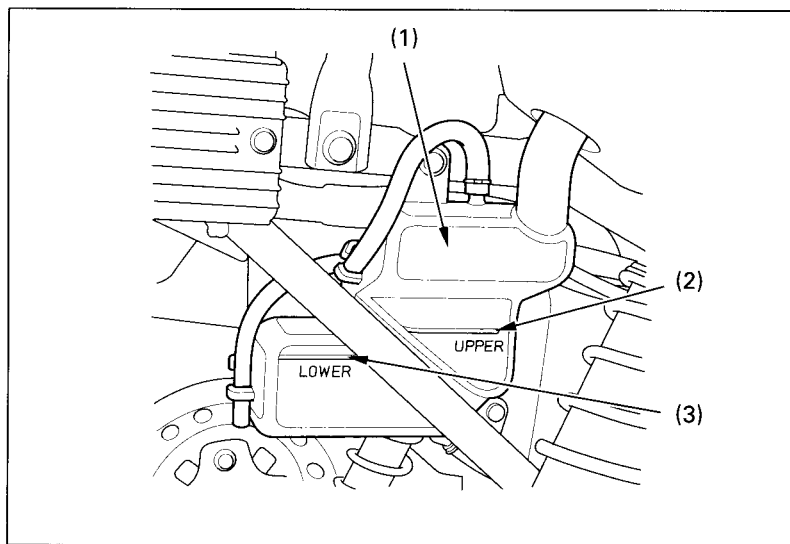


Fig. 2-32 (1) Coolant reserve tank

(2) UPPER level  
(3) LOWER level