

## ENGINE

### SPARK PLUG

The standard spark plug is: IJR7A9 (NGK)  
or VX22BC (DENSO)  
For cold climate (Below 5 °C, 41 °F): IJR6A9 (NGK)  
or VX20BC (DENSO)

Your FOURTRAX uses a spark plug that has an iridium coated center electrode. Be sure to observe the following when servicing the spark plug.

- Do not clean the spark plug. If the electrode is contaminated with accumulated objects or dirt, replace the spark plug with a new one.
- Use only a “wire-type” feeler gauge to check the spark plug gap to prevent damaging the iridium coating of the center electrode. Never use a “leaf-type” feeler gauge.
- Do not adjust the spark plug gap. If the gap is out of specification, replace the spark plug with a new one.

#### **CAUTION:**

**Using a spark plug of incorrect size or heat range can cause serious engine damage.**