


WIRING DIAGRAM

00307-HN2-6500

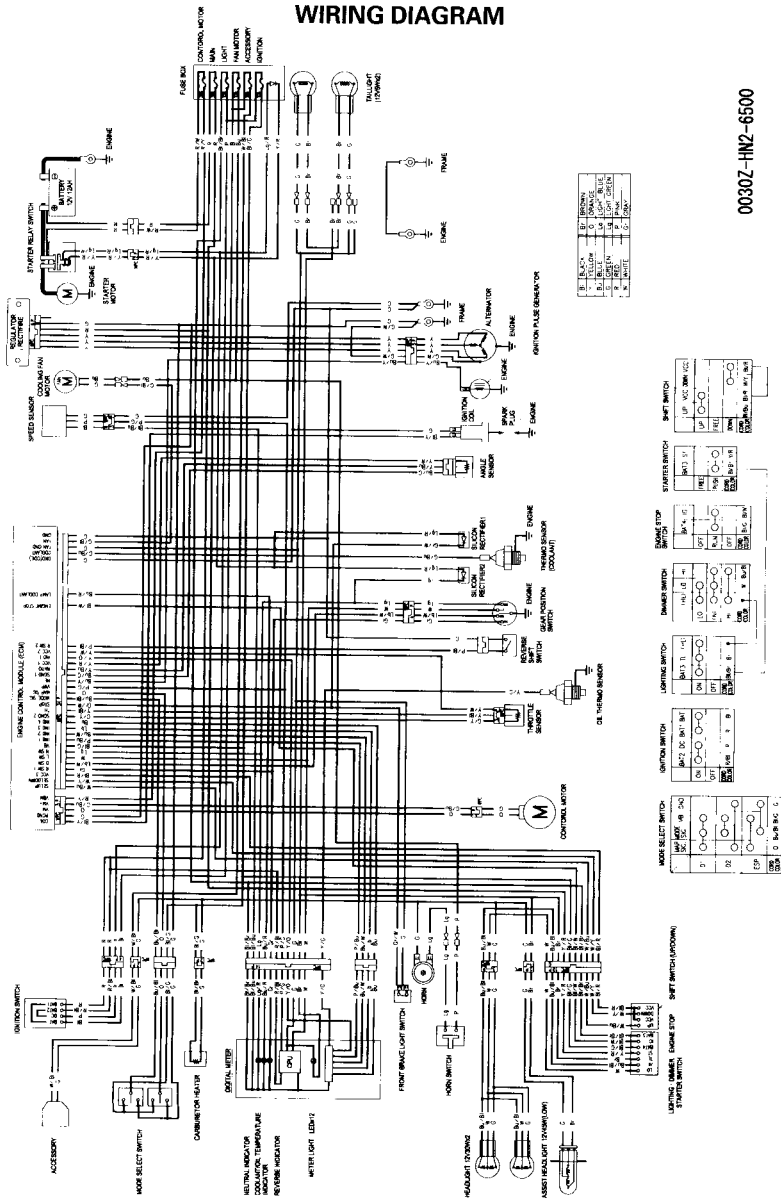

| | |
|----|----------|
| 1 | IGNITION |
| 2 | IGNITION |
| 3 | IGNITION |
| 4 | IGNITION |
| 5 | IGNITION |
| 6 | IGNITION |
| 7 | IGNITION |
| 8 | IGNITION |
| 9 | IGNITION |
| 10 | IGNITION |
| 11 | IGNITION |
| 12 | IGNITION |
| 13 | IGNITION |
| 14 | IGNITION |
| 15 | IGNITION |
| 16 | IGNITION |
| 17 | IGNITION |
| 18 | IGNITION |
| 19 | IGNITION |
| 20 | IGNITION |

