

Indicators & Display

1	Reverse indicator	Lights when the transmission is in reverse. <i>Lamp Check</i>
2	Neutral indicator	Lights when the transmission is in neutral. <i>Lamp Check</i>
3	Oil/coolant high temperature indicator	Lights when engine oil and/or coolant temperature is high enough to adversely affect the service life of the engine. If the oil/coolant high temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 198. <i>Lamp Check</i>
4	Multi-function display	The display includes the following functions. <i>Display Check.</i>
	Drive mode indicator	Show the driving mode (page 19).
	Gear position indicator	Show the gear position. (page 20)
	Oil change indicator	Lights when specified maintenance interval for engine oil change is reached (page 21).
	Speedometer	Shows riding speed.
	Odometer	Shows accumulated mileage (page 22).
	Tripmeter	Shows mileage per trip (page 22).
	Hourmeter	Shows hours and tenths of hours of engine operation (page 23).
	Digital clock	Shows the time (hours and minutes) (page 24).