

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to **Break-in Guidelines** (page 218).

For information about carburetor adjustment for riding at high altitude, see page 219.

Safe Riding Precautions.....	61
Off-Road Use Only.....	61
Keep Hands and Feet on Controls.....	62
Control Speed.....	63
Use Care on Unfamiliar or Rough Terrain.....	64
Do Not Perform Stunts.....	65
Starting & Stopping the Engine	66
Preparation	66
Starting Procedure.....	67
Flooded Engine	69
Stalled Engine	69
How to Stop the Engine	70
Using the Recoil Starter	71
Shifting Gears	72
Riding in Reverse.....	79

(cont'd)