

# Shifting Gears

---

Your ATV has four gearshift lever positions: Neutral (N), Drive (D), Low (L), and Reverse (R).

## Neutral (N)

Use neutral when you start the engine, or if it is necessary to stop briefly with the engine idling.

## Drive (D)

Use this position for normal riding. The following three modes can be selected in the Drive (D) position; Automatic Shift (D1 and D2) Mode and Manual Shift (ESP) Mode.

You can select the desired mode with the drive mode select switch.

### Automatic Shift (D1 and D2) Mode:

Use this mode for everyday riding. The transmission automatically adjusts to keep the engine at the best speed for riding conditions.

The gear position indicator shows “D” and the drive mode indicator shows the selected drive mode (D1 or D2).

D1 mode: Use this mode for maximum performance.

D2 mode: Use this mode for minimum traction situations, such as ice.

### Manual Shift (ESP) Mode:

In this mode, you can shift gears much like a manual transmission, but without operating a clutch.

You can select five forward shift positions by operating the shift switches; 1, 2, 3, 4, and 5.

The gear position indicator shows the selected position and the drive mode indicator shows “ESP.”