


Gear Case Oil

1. Park the ATV on level ground.
2. Place an oil drain pan under the oil drain plug (1).
3. Remove the oil filler cap (2), drain plug and sealing washer (3).
4. After the oil has completely drained, reinstall the drain plug with a new sealing washer and tighten it to the specified torque:
12 N·m (1.2 kgf·m , 9 lbf·ft)
5. Fill the gear case with the recommended oil.
75 cm³ (2.5 US oz , 2.6 Imp oz)
6. Remove the oil level check bolt (4) and sealing washer. Make sure the oil level reaches the oil level check hole (5).
7. Install the oil filler cap and oil level check bolt with a new sealing washer.

REAR

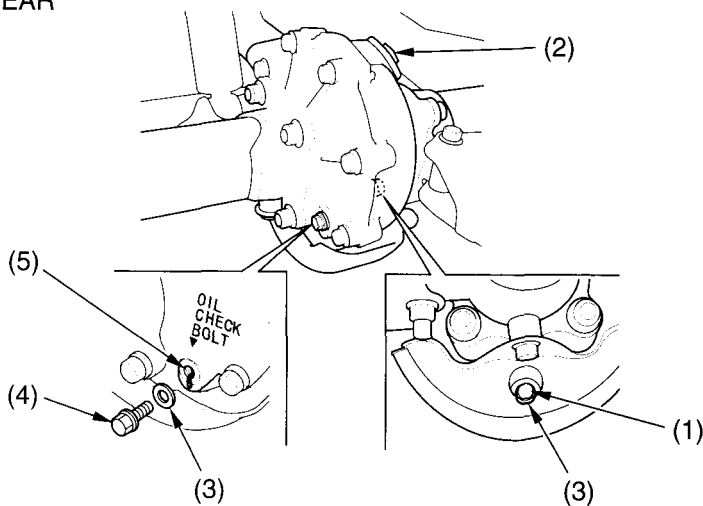

- (1) oil drain plug
(2) oil filler cap
(3) sealing washer

- (4) oil level check bolt
(5) oil level check hole