


# Indicators & Displays

## Odometer

When selected, the odometer (1) registers total distance traveled in miles while the ignition is ON (I). To change the display, press and release the Odometer/Tripmeter (mode) select button (2).

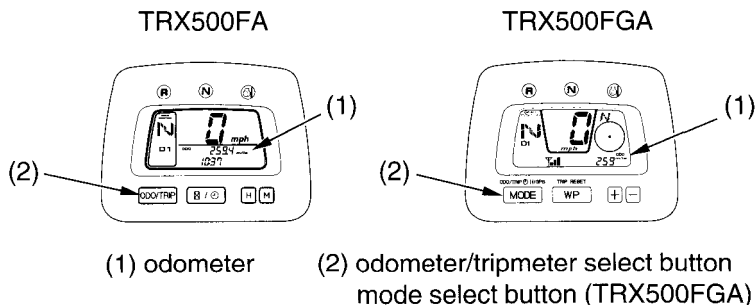

## Tripmeter

When selected, the tripmeter (3) shows mileage per trip while the ignition is ON (I). To change the display, press and release the Odometer/Tripmeter (mode) select button (2). To reset the tripmeter to zero, press the Odometer/Tripmeter select button (WP button(4)) and hold it in for at least two seconds.

