




Indicators & Displays


(For TRX500FGA/FPA)

The odometer/tripmeter display has two functions: odometer (1) and tripmeter (2).

The odometer registers total distance traveled in miles or kilometers (Canada) while the ignition is ON (1). The tripmeter shows mileage per trip while the ignition is ON (1). To change the display from tripmeter to odometer, press and release the odometer/tripmeter select button (3).

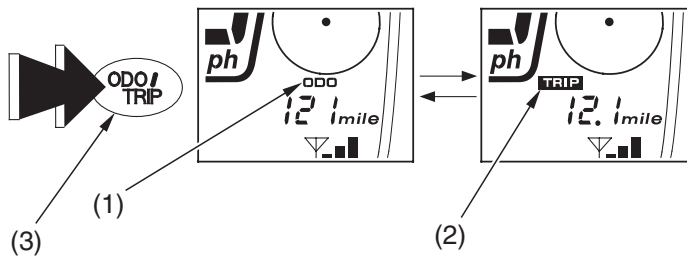

To reset the tripmeter to zero, press and hold the odometer/tripmeter select button for more than 2 seconds.

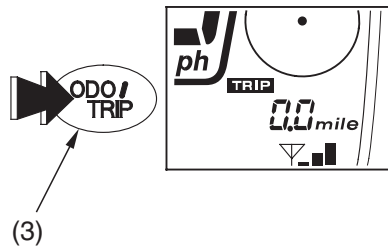

(1) odometer
(2) tripmeter

(3) odometer/tripmeter
select button

