



GPS Mode


The GPS mode (1) shows the shortest distance to your selected waypoint. And, when your ATV is moving (one mph or faster), the GPS mode also displays an electronic arrow to indicate the direction to the selected waypoint.

(For TRX500FGA)

Push the GPS button (2) to switch between the GPS mode and the other two modes: odometer and tripmeter.

To change the display to odometer or tripmeter, press and release the odometer/tripmeter select button (3) while the display is in the GPS mode. The display will change to the previous display mode (odometer or tripmeter).

Any time you are not in the GPS mode, the compass direction indicator (4) will function while your ATV is moving (one mph or faster) (page 87).

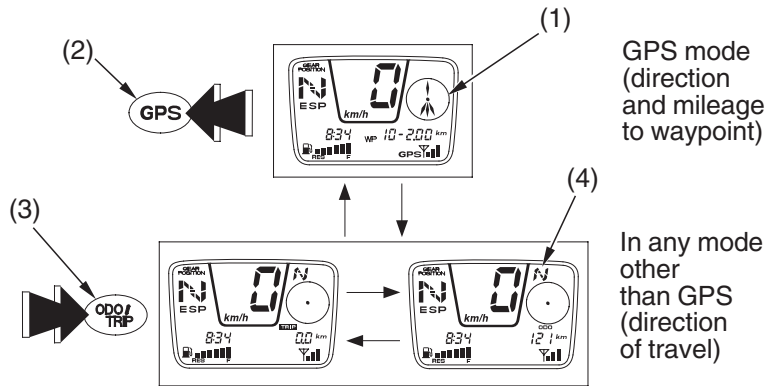

- (1) GPS mode
- (2) GPS button
- (3) odometer/tripmeter select button
- (4) compass direction indicator

