



Shifting Gears

The shift lever (1) is located on the left side of the fuel tank.
To shift the shift lever, bring the ATV to a complete stop.

NOTICE


If the shift lever is moved while the vehicle is moving, the sub-transmission may be damaged.

For most shifts, move the shift lever without pushing the release button (2).

You must push the release button before moving the shift lever in the following two situations:

- To shift out of neutral (N)
- To shift down to low (L) from drive (D)

LEFT SIDE OF FUEL TANK

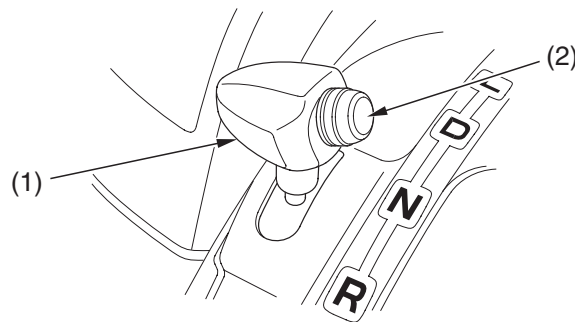

(1) shift lever

(2) release button

If the shift lever will not move easily to another gear position, rock the vehicle back and forth slightly to line up the gears in the sub-transmission.

120 Basic Operation & Riding

