

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 214).

For information about carburetor adjustment for riding at high altitude, see page 215.

Safe Riding Precautions.....	63
Off-Road Use Only.....	63
Keep Hands and Feet on Controls.....	64
Control Speed.....	65
Use Care on Unfamiliar or Rough Terrain.....	66
Do Not Perform Stunts.....	67
Starting & Stopping the Engine	68
Preparation	68
Starting Procedure	69
Flooded Engine	71
Stalled Engine	71
How to Stop the Engine	72
Using the Recoil Starter	73
Shifting Gears	74
Riding in Reverse.....	77

(cont'd)