
## **Brakes**

## **Draining Water from Brakes**

Refer to Safety Precautions on page 93.

## RIGHT REAR

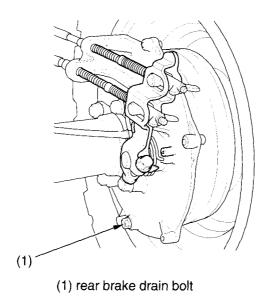

- 1. Make sure the engine is off and the parking brake is set.
- 2. Remove the rear brake drain bolt (1) from the bottom of the rear brake panel.

If any water drains, the brake seals must be replaced by your Honda dealer as soon as possible.