




## If a Fuse Blows

### *Circuit Fuse Access*

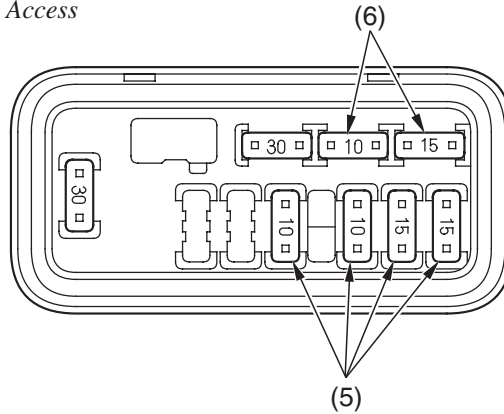

(5) circuit fuses

(6) spare fuses



1. To check or replace a circuit fuse (5), pull the old fuse out of its retaining clips.  
If the fuse is blown, replace it with a spare fuse (6) of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### **NOTICE**

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

2. Install the fuse box cover.
3. Install the seat.

## **194** Taking Care of the Unexpected

