

Indicators

1	Reverse indicator	Lights when the transmission is in reverse. <i>Lamp Check</i>
2	Neutral indicator	Lights when the transmission is in neutral. <i>Lamp Check</i>
3	High oil temperature indicator	Lights when engine oil temperature is high enough to adversely affect the service life of the engine. If the high oil temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 172. <i>Lamp check</i>