

# Starting & Stopping the Engine

---

## Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine:

1. Leave the engine stop switch set to RUN (  $\odot$  ).
2. Push the choke knob down all the way to fully OFF.
3. Open the throttle fully.
4. Press the start button for 5 seconds (or operate the recoil starter several times).
5. If the engine starts, quickly close the throttle, then, if idling is unstable, open it slightly.
6. If the engine does not start, wait 10 seconds, then follow the *High Air Temperature* procedure (page 54 ).

If the engine still won't start, refer to *If Your Engine Quits or Won't Start*, page 166 .

## Stalled Engine

You can restart the engine while the vehicle is stopped by squeezing the front brake lever and pressing the start button.

Do not press the throttle while starting in gear. Your ATV is equipped with a start inhibitor system that will cut off the ignition if the throttle is open while attempting to start in gear.

Once you have started the engine, release the front brake lever, then apply throttle gradually.