

# Maintenance Schedule

## Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		km	mi	150	1000	2000	
				100	600	1200	
		NOTE	HOURS	20	100	200	
*	FUEL LINE					I	—
*	THROTTLE OPERATION					I	123
*	CARBURETOR CHOKE					I	125
	AIR CLEANER	NOTE 1			C	C	117
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	122
	SPARK PLUG				I	I	130
*	VALVE CLEARANCE			I	I	I	133
	ENGINE OIL			INITIAL= 150 km (100 mi), 20 operating hours or 1 month: R REGULAR= Every 1,000 km (600 mi), 100 operating hours or 12 months: R			106
	ENGINE OIL FILTER			R	R	R	111
*	ENGINE IDLE SPEED			I	I	I	128

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.