


Shifting Gears

AUTO Mode

When the drive mode is at AUTO, shifting the lever to “D” (Drive) provides a 3-speed automatic transmission.

1. While pulling up the gearshift lever (1), shift to “D.”
2. Pull down the gearshift lever and confirm that the lever is locked and the gear position indicator (3) is showing “D.”

Shifting to “N” (Neutral) or “R” (Reverse) is in the same manner as above. For reverse, refer to the *Riding In Reverse* (page 76).

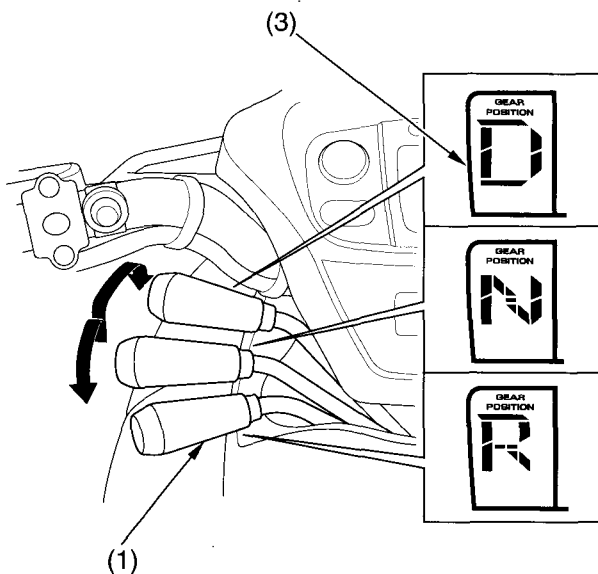

(3) gear position indicator