

Shifting Gears


ESP Mode

With the drive mode set at ESP, shifting the lever to “D” allows manual shifting from 1st to 3rd using the gearshift switches.


Two gearshift switches are located next to the left handlebar grip: upshift (⤴) and downshift (⤵).

To upshift the transmission, press the upshift switch (4) once.
To downshift the transmission, press the downshift switch (5) once.

UPSHIFTING SEQUENCE

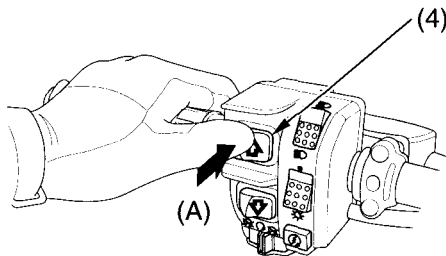

DOWNSHIFTING SEQUENCE

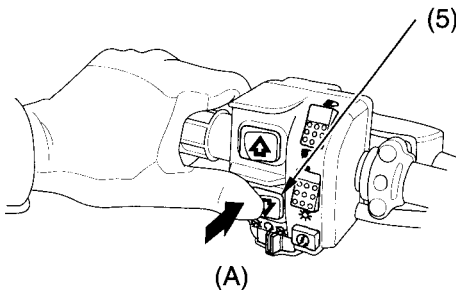

- (4) upshift switch
- (5) downshift switch

(A) push