


Air Cleaner

Cleaning

1. Remove the seat by pulling the seat latch (1) up.

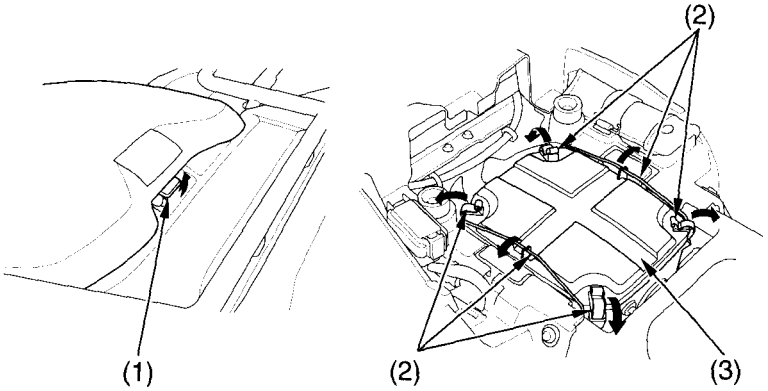

(1) seat latch
(2) retainer clips

(3) air cleaner housing cover

2. Unlatch the retainer clips (2).
3. Remove the air cleaner housing cover (3).