

Indicators & Displays

8	Hour select button	Advances the hour displayed by the digital clock (page 25).
	Plus button (TRX650 FGA)	Advances the latitude and longitude when in the GPS mode.
9	Minute select button	Advances the minutes displayed by the digital clock (page 25).
	Minus button (TRX650 FGA)	Advances the latitude and longitude when in the GPS mode.
10	Adjust button	Used to set the digital clock (page 25).
	WP button (TRX650 FGA)	This button is used to input a waypoint or to erase waypoint data.
11	GPS button (TRX650 FGA)	This button is used to select the GPS navigation mode.