

Indicators & Displays

Digital Clock

Shows hour and minute while the ignition is ON (1).

To change the display from hourmeter to digital clock, press and release the hourmeter/digital clock select button (1).

To adjust the time, proceed as follows for TRX650FA :


1. Turn the ignition switch ON (1).
2. To select the adjust mode, push the adjust button (2) once.
3. To advance the hour display one unit at a time, press and release the hour select button (3).

To advance the hour display automatically, press and hold the hour select button. After two seconds, the hour display will begin advancing. Release the button when the display reaches the desired hour.

4. To advance the minute display one unit at a time, press and release the minute select button (4).

To advance the minute display automatically, press and hold the minute select button. After two seconds, the minute display will begin advancing. Release the button when the display reaches the desired minute.

5. To zero the minute display, press and hold both the hour and minute buttons simultaneously for two seconds.

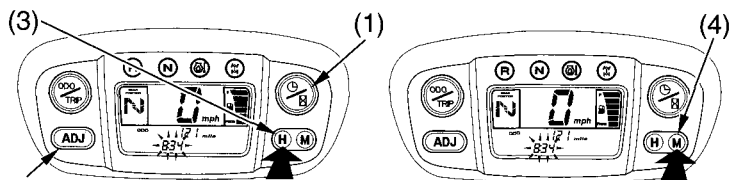

- (1) hourmeter/digital clock select button
(2) adjust button

- (3) hour select button
(4) minute select button